



beyond
payment


Telium How to Change the Communication Settings Guide

Ryan Ahern 6/2/2012
Version 1.1

3025 Windward Plaza, Suite 600, Alpharetta GA 30005.
Tel 678 456 1200. Fax 678 456 1201– www.ingenico-us.com

1. How to Change the Comm. Settings

1. Restart the pin pad by pressing [-] and Yellow [Clear] simultaneously until the pin pad beeps
 - a. On the iPP3xx and iSMP restart the pin pad by pressing [.,#*] and the Yellow [Clear] keys simultaneously until the pin pad beeps
2. Wait for the pin pad to display the RBA or UIA initialization screen which will look similar to this

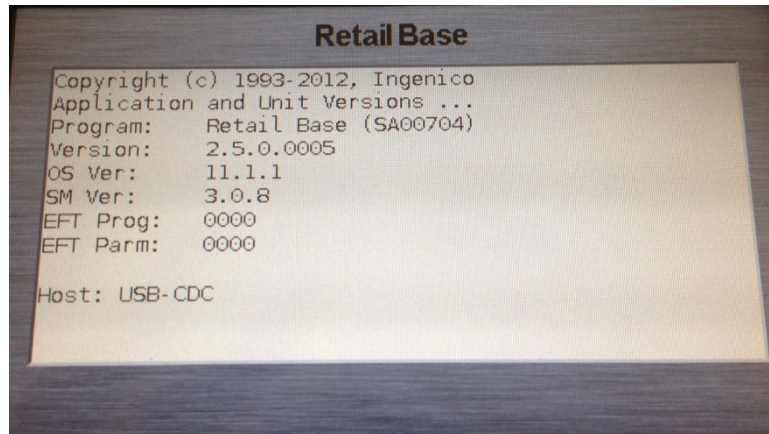

3. When RBA or UIA initialization screen appears press...
 - a. iSC350 and iSC250
 - i. [2][6][3][4][Enter][+][+]
 - b. iPP3xx and iSMP
 - i. [2][6][3][4][Green Key][F][F]
4. **If successful the Functions menu should appear (below) if the Functions menu does not appear then please go back to step 1**



5. Using the [+] and [-] to scroll to "TDA Menu" and hit [Enter]
 - a. iPP3xx and iSMP
 - i. To scroll down use [F2] to scroll up use [F3]
6. Select "Configuration" and hit [Enter]
7. Select "Communication" and hit [Enter]
8. Select "Select Comm. Type" and hit [Enter]

9. Once you have selected your communication setting hit [Enter]
10. Proceed to hit [Cancel] 3 times, you will then be prompted to save your changes at which time you should hit [Enter] and then the terminal will restart on its own and apply the changes made

Functions	TDA V2.x	Configuration	Communication	Select Comm
0-TELIUM MNG	0-Configuration	0-Communication	0-Select Comm	Serial
1-SECURITY_APP	1-Download	1-Download Meth	1-Serial Sett	Ethernet
2-TSA	2-Remote Dwnld	2-EFT Settings	2-Ethernet Sett	USB-HID
3-TDA	3-TMS Download		3-Tailgate Sett	USB<>Serial Conv
4-CAV-DEV	4-Activate Sftwre			Tailgate
5-PINPAD_AGENT				